CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.




NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Leg Frame	B	2X
В	Back frame		1X
С	Seat frame		1X
D	Cross bar		1X
Е	Allen bol	6x50mm	8X
H1	Horizontal spread	6	2X
H2	Screw	0 6x35mm	4X
НЗ	Wooden	0	6X
H4	Allen key		1X

Model# PAT7013 Product Dimensions:25,6" W x 37.8" D x 30.7" H

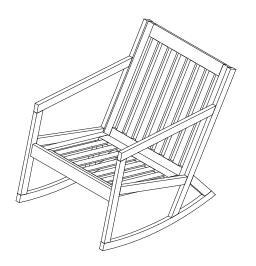


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes.

Tools Required for Assembly (included): Allen Key

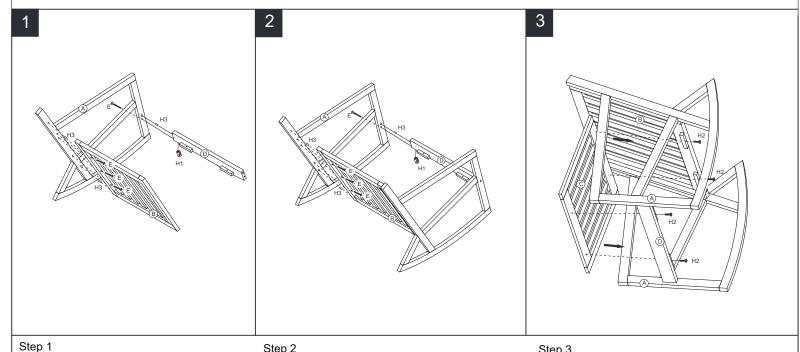

Attached (A) to (B),(D) and using (H3) to put on the hole.(E),(H1) tighten by (H4)

Step 2
Attached (A) to (B),(D) and using (H3) to put on the hole.(E),(H1) tighten by (H4)

Step 3
(C) pull down the arrow and using (H2) tighten by (H4)